


# TUNWALL RADIO

## TRC-1 AND TRC-1P INTERLOCK AND PLATE CONTROL BLOCK DIAGRAM

### TRC-1

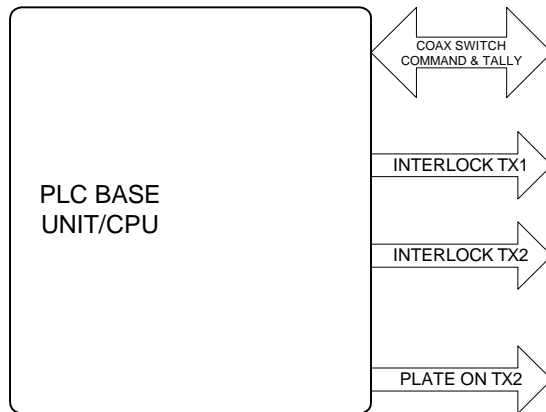


TRC-1 has automatic plate on for transmitter 2 when auto transfer is enabled. This is enough automatic control for many stations.

All interlock and plate control outputs are floating contacts.

Both controllers have more functions than are indicated here.

### TRC-1P (P for additional plate control)

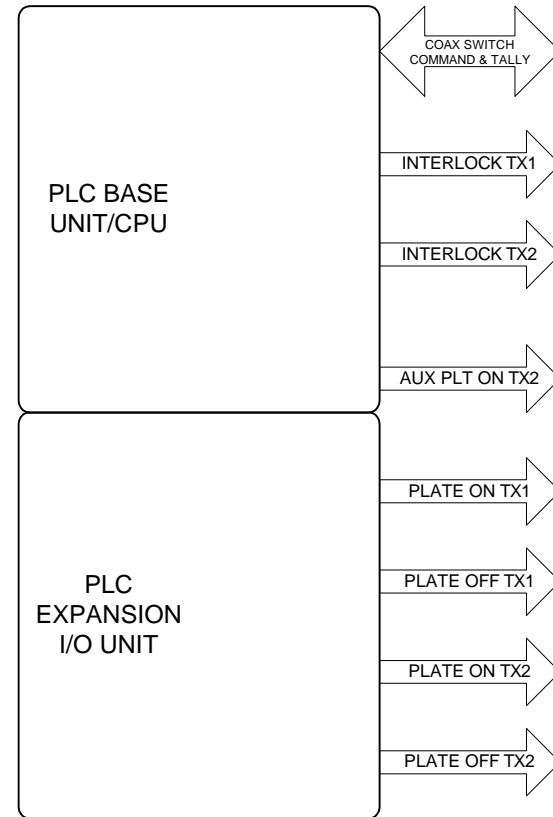

TRC-1P has automatic plate on and off control for each transmitter, whether or not auto transfer is in use. This allows one-button transmitter change in either direction.

All interlock and plate control outputs are floating contacts.