

For 2 coax switches and 2 antennas, IBOC or analog. Safe switching from a single momentary local or remote command. Logic for a third transmitter is programmed. Automatic plate on and off for all 3 transmitters.

Key switch selected AUTO function will transfer to the aux transmitter upon failure of the main transmitter. Front panel flow chart graphic clarifies RF connections. Dummy load ready light works with the load interlock logic for automatic load protection. Works with Dielectric 50000, 60000, Delta, Andrew, or any other coax switch with 12VDC, 24VDC, or 120VAC command inputs. Coax switches are connected to 9-pin plugs, same series as 60000 switch connector. All transmitter and remote connections are to standard .375 barrier strips.

Photos and more information at tunwallradio.com